



**These Instructions Must be Read by the User Before  
Operating the Splitter**



**Block, slab & stone splitters**

**These instructions must be read by the user before operating the splitter**

**1** The splitter must be operated correctly according to the manufacturer's or owner's operating instructions which are available on request if required.

**2 CHECK** that all persons and animals are clear of the work area.

**3** Wear personal protective equipment; gloves and boots with steel toecaps are usually necessary.

**4** Position the machine on firm level ground.

**5 CHECK** the splitter before use to ensure that all bolts are tight, especially those securing the blade.

**6 CHECK** that there is adequate workspace around the machine. **DO NOT** allow stone or concrete debris to accumulate in the work area.

**7** Only use the cutting blade supplied with the machine.

**8** Keep all parts of the body clear during the cutting or splitting operation.

**9** When cutting a large block of stone or concrete it may be necessary to support the block to prevent it falling dangerously.

**10 DO NOT** attempt repairs. Contact the Hire Company.